T9
T9 ARE YOU READY?

THIS PAGE LEFT INTENTIONALLY BLANK

robosen

T9

QUICK START GUIDE

robosen T9

POWER ON

- Take out the T9 from the box and place it on a flat, even surface.
- Open the cover of the cockpit, then press and hold the power button until the T9 says "Hello Humanity."

INSTALL MOBILE APP

- Search "T Nine" on the App Store (Apple) or Google Play (Android), download, and install.
- Download the English version or Chinese version based on your preference.

Download on the App Store

GET IT ON Google Play

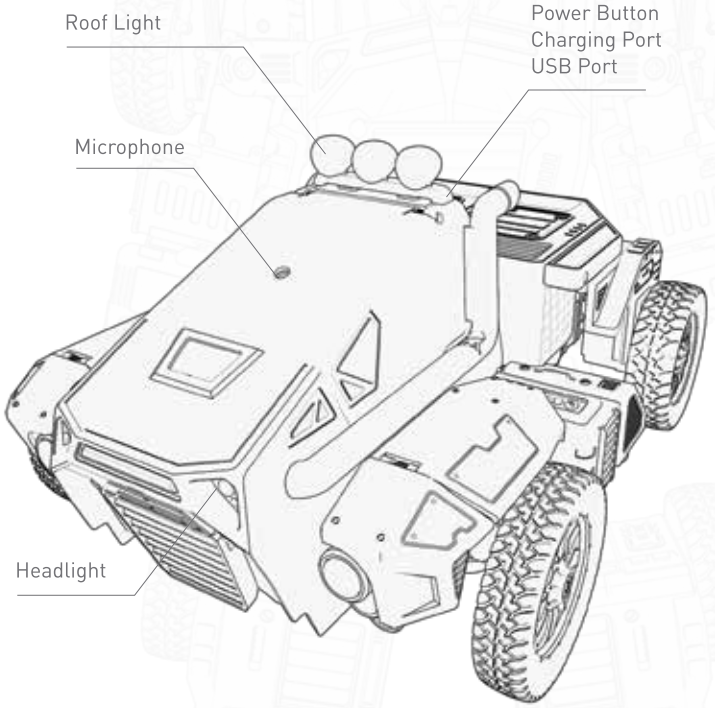

QUICK START GUIDE

robosen T9

CONTROL VIA APP

- Ensure your device's Bluetooth is On.
- Turn On the T9.
- Open the T9 App, then tap the Connection Icon located on the top right-hand corner of the Main Page.
- Tap on the "Search T9" icon.
- An icon with your T9's unique serial number will appear. Example: "T9-0000". Tap on the "T9-0000" icon.
- Have fun controlling the T-9 via the App.

CONTROL VIA VOICE

- Turn On the T9.
- Say "Hey, T Nine" to enter Voice Control mode. The T9 will respond "I'm here."
- Say "Transform" to automatically transform the T9 from vehicle form to robot form and vice versa.
- See the Voice Command Card for more preset voice commands.
- (NOTE: Voice control functions cannot be used while the T9 is connected with the T9 app. Disconnect from the T9 app to use voice control.)

POWER OFF

- Press and hold the power button until the T9 says "See you next time humanity."
- If connected via the App: Tap the Connection Icon located on the top-right corner of the Main Page. Tap the "Shutdown T9" icon.

CHARGING

- Open the cover of the cockpit to connect one end of the power adapter to the T9. Connect the other end of the power adapter to a power outlet. The T9 will say "Start to replenish energy" and start charging.
- The roof light stops blinking and changes to a solid steady light when the T9 is fully charged.

FUNCTIONALITY

robosen T9

STANDING UP AUTOMATICALLY

- Sensors and an internal gyroscope detects the T9's position and will automatically rotate the robot into an upright position if tilted.
- The automatic standing feature can be enabled or disabled on the top-right corner of the Bluetooth Control page

2 WAYS TO CONTROL THE T9

1. Voice Control

- See Voice Command Card for more information.

2. Control via the App on your smart device.

ACTION STUNTS

- The T9 can perform thousands of possible actions.

ROBOT PROGRAMMING

Primary Programming Mode - Manual:

- This is a basic programming mode that anyone can easily get started with. The T9's movements can be edited by hand and recorded and combined into a series of actions.

Intermediate Programming Mode – Graphical:

- This is one of the most popular programming modes in the world. The user can create and modify T9's actions via the graphical user interface to create a multitude of customized actions.

Advanced Programming Mode - 3D:

- The most advanced programming mode utilizes a combination of 3D graphics and SCRATCH.

Tutorial Video:

- View the full tutorial video on our official website www.robosen.com or mobile app.

VOICE COMMAND CARD

robosen T9

VOICE CONTROL

Speak English clearly and at a moderate speed.

- Say "Hey, T Nine". Wait for the T9 to say "I'm here" and then use the following commands within 10 seconds to perform v voice control.
- Please use only one command at a time. If the T9 is unresponsive, say "Hey, T Nine" again to reset.
- Must be disconnected from the App to use Voice Control.

Command	Description
"Transform"	Transform between robot form and vehicle form.
"Open Fire"	T9 will simulate a shooting action with its right and left hand in robot form.
"Showtime"	T9 will simulate a shooting action and say "Hello, I'm T9" in robot form. Once complete it will transform to vehicle form.
"Say Hello"	T9 will say "Hello" and wave its right hand while speaking in robot form.
"Let's Fight"	T9 will speak and move its arms in robot form.
"Dance Now"	T9 will automatically perform a variety of randomly selected dances in robot form.

If in vehicle form, the T9 will first transform into a robot before performing the actions above.

TROUBLESHOOTING

robosen T9

Q: THE ROBOT IS MALFUNCTIONING.

① Turn off and restart the robot.

② Ensure the robot is sufficiently charged.

③ Check the website for video tutorials on troubleshooting issues.

④ Contact customer service for additional help.

Q: ROBOT IS UNRESPONSIVE USING VOICE COMMAND.

① Check the Bluetooth connection.

② Ensure the robot is disconnected from the App.

③ Use the preset Voice Commands to control your robot.

④ Ensure you are in a quiet setting with minimal background noise.

Q: THE ROBOT CAN'T KEEP ITS BALANCE WHEN IT IS WALKING OR DOING OTHER ACTIONS.

Ensure the robot is on a smooth flat surface. Robot will not function properly on an uneven or bumpy surface.

Q: THE ROBOT DOES NOT POWER ON.

① Ensure the Robot is sufficiently charged. Charge the Robot fully and power on.

② Press and hold the power button until the T9 says "Hello Humanity."

Q: APP CANNOT CONNECT TO THE ROBOT.

① Ensure the robot is sufficiently charged and turned on.

② Ensure Bluetooth is enabled on your smart phone/tablet.

③ Ensure your device permissions are enabled for the robot on your device.

④ Ensure only one device is connected to the robot. Disconnect the robot from any other smart phone/tablet you are not using.

Q: THE ROBOT STILL SHOWS LOW BATTERY AFTER CHARGING FOR A LONG TIME.

Ensure both ends of the charging cable are properly plugged in.

robosen

T9

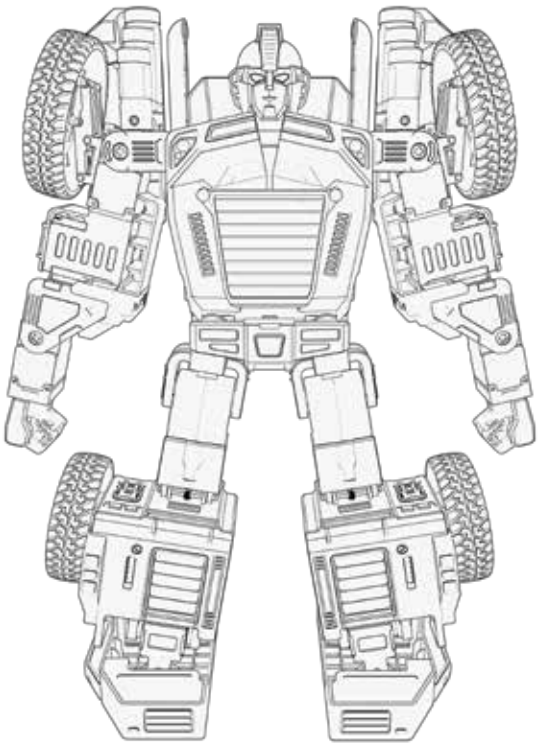

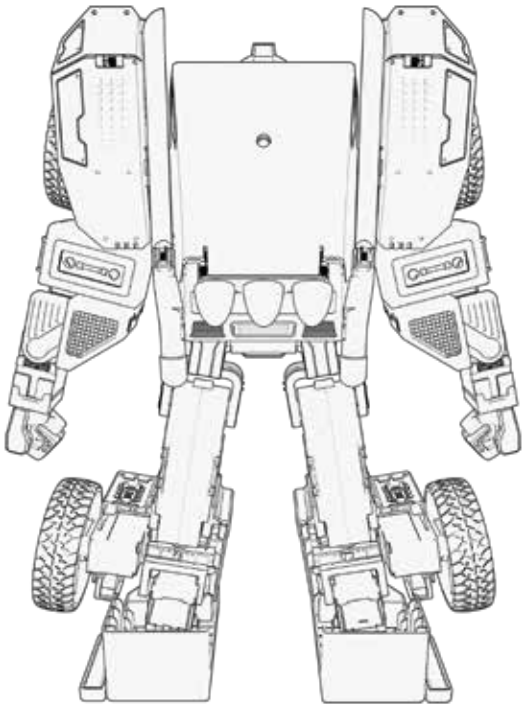

ADVANCED PROGRAMMABLE ROBOT

PRODUCT SPECIFICATION

robosen T9

Dimensions	Robot Form: 265×163×340 mm; Vehicle Form: 287×198×149 mm
Weight	1.48kg
Material	Aluminum alloy frame, ABS+PC shell
Servo motor	22 (Chest 2 / Hands 4×2 / Legs 5×2 / Drive Wheels 2)
Wireless Connection	Bluetooth 4.2 BLE
Control Method	Mobile app, voice control
External Ports	DC charging port, Micro USB port
Battery Capacity	2000mAh lithium battery pack
Adapter	Input 100V-240V ~ 50/60Hz 0.6A, Output DC 12V 2A

PACKING LIST

T9 Robot x 1

User Manual x1

Power Adapter x1



Data Cable x1

WARNINGS

robosen T9

WARNING

- This product is designed for users aged 14 and above.
- Use the product on a flat and smooth surface. The product will not perform properly on uneven surfaces such as carpet or a bumpy floor.
- Keep the product clean and dry and away from excessive heat and fire.
- Do not exceed one hour of continuous use. Misuse can degrade the product's functionality and lifespan.
- Do NOT forcibly move the product or its parts while it is running. Misuse can lead to damage to the product and harm to the user.
- Do NOT operate the product on elevated surfaces (shelves, desk) where it can drop or fall. This can damage the product and compromise its safe operation.
- Use the original adapter to charge the product, using third-party adapters may cause damage to the product or user.
- For help with disassembly or repair, visit the nearest service station or contact customer service.
- In case of abnormalities during use, shut off the power immediately.
- The Battery is flammable. Do Not Open, Alter, Incinerate or expose to Heat Above 35°C.
- Please read Product and Warranty Information Guide included with the product.

Watch your FINGERS!

Do NOT touch the product while it is transforming or moving.

Do NOT forcibly remove or lift the head of the product.

Do NOT Open, Crush, or expose the product to heat above 35°C.

Do NOT Incinerate the Battery.

robosen

T9

PROGRAM. PLAY. CONTROL. SHARE.

Robosen Robotics Inc.
Address : 1431 Potrero Ave. #E South El Monte, CA 91733
Website : www.robosen.com
Support: support@robosen.us